 


Smart Interactive Projector

User Manual

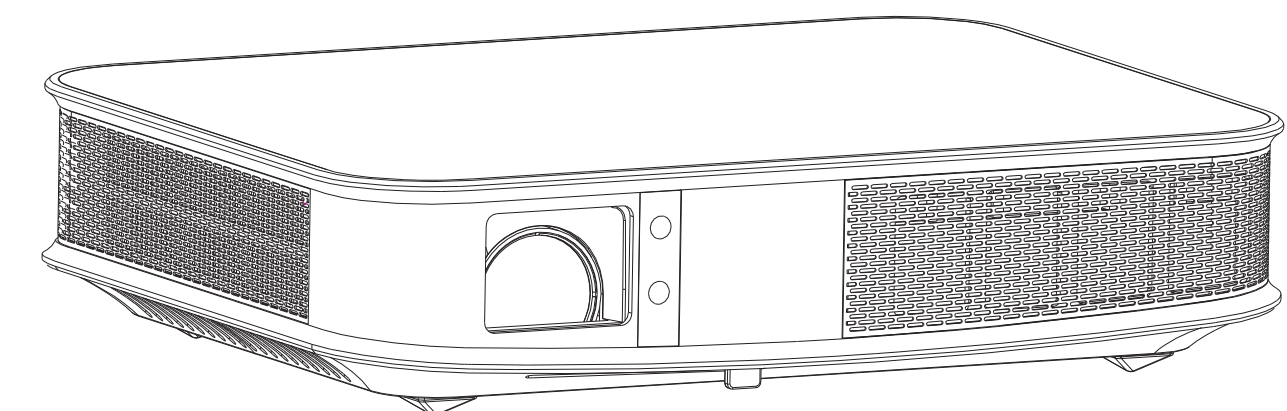

 
 
Package Contents

- 1*H2 projector; 1*power adapter; 1*IWB pen; 1*remote; 1*user manual; 1*warranty card; 1*IWB pointer(optional).

- When you unpack the package, make sure you have all the components. For any lack, please contact the local dealer.

- This User Manual is the guidance for the projector operation.

Projector Overview

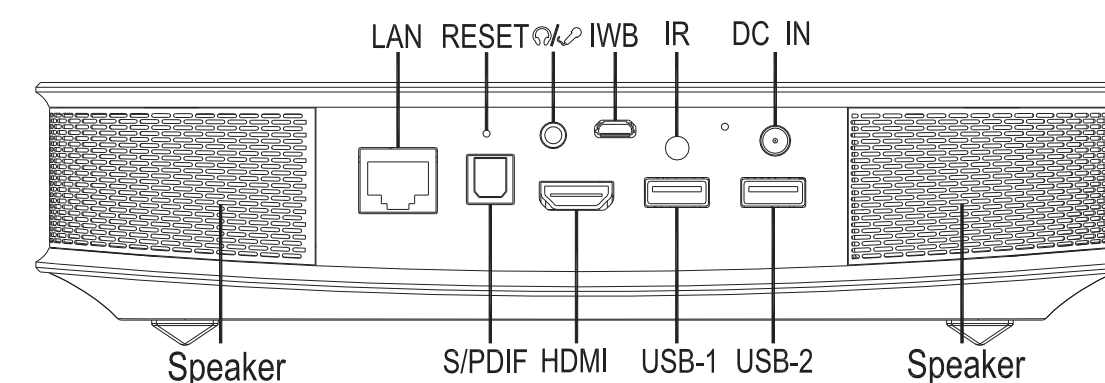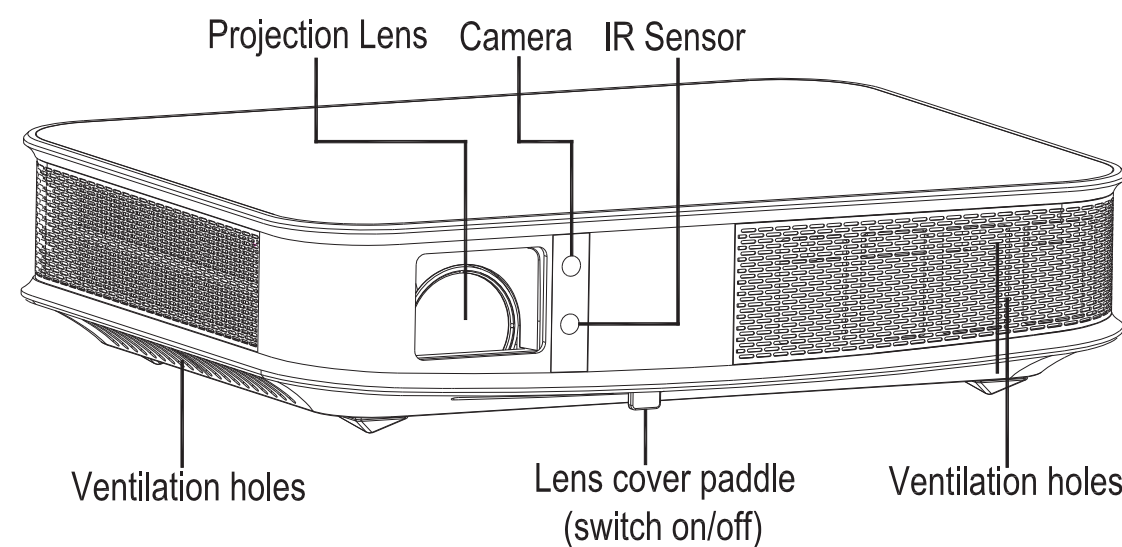

Powering On/Off the Projector

• Powering On the Projector

Connect the power adapter to DC IN, and slip the lens cover paddle to the end, the projector will be on in seconds.

 
• Powering Off the Projector

slip the lens cover paddle to cover the whole lens, the projector will be off.

Power Light Indicating

- When the platform works, the light is green;
- When the platform stand-by, the light is red.

Remote Control Operation

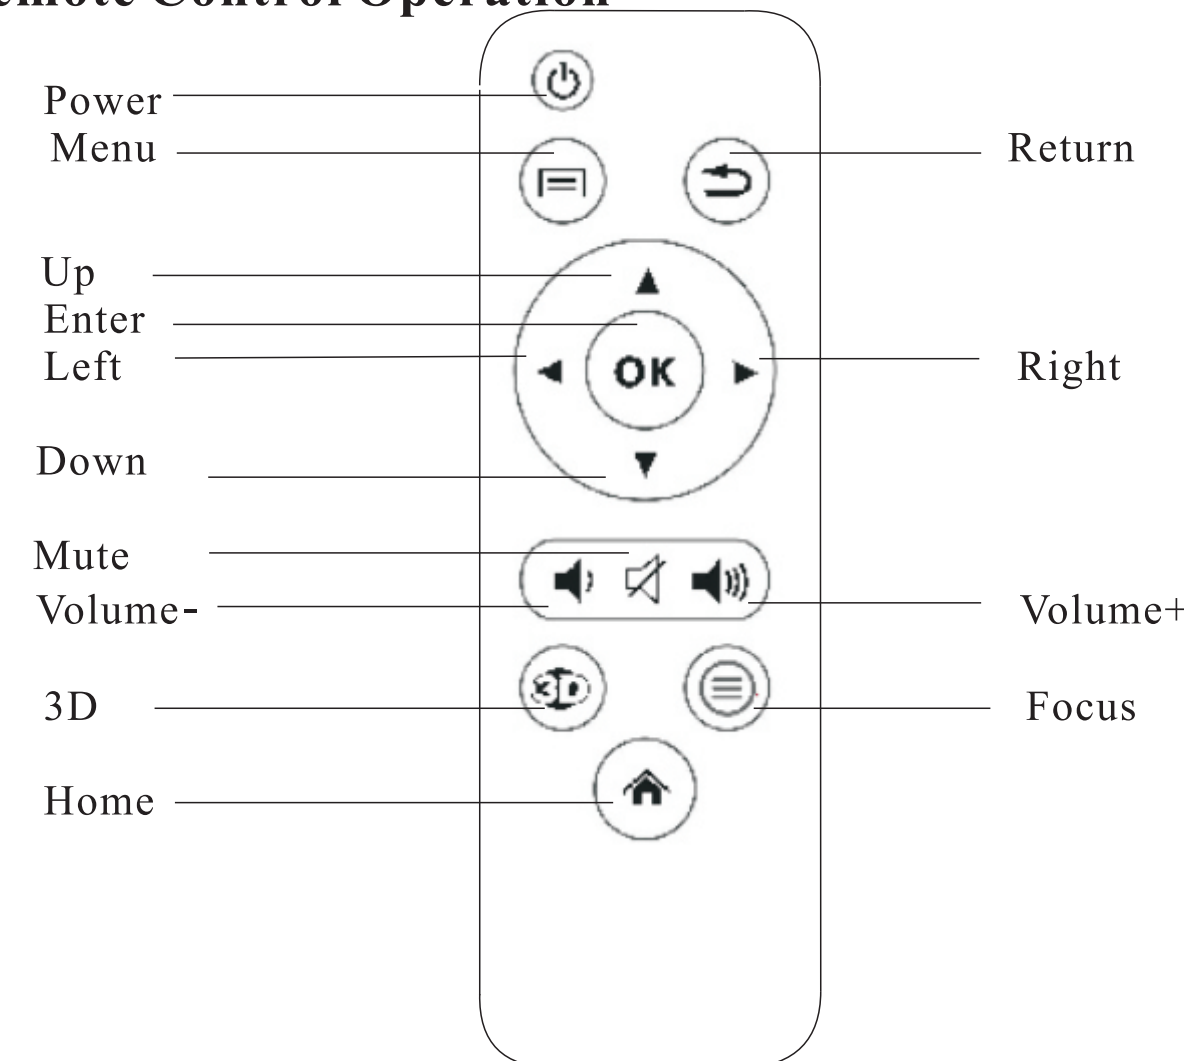

• Focus Button

Press Focus button on the remote control, and press LEFT/RIGHT to get the best projection image.

• 3D Button

Press 3D Button while video plays, and select the proper 3D format according to the video.

Mobile Control Operation

Ensure the “smartphone” and the projector connected to the same WIFI, and press “Controller Server” in the home page, scan the QR code, and install the application. Open the App, and operate by the “smartphone” after selected the matched projector.

Smart Touch

- Need to Manual Calibrate and Distance Adjustment when use Smart Touch for the first time, or the position changed.

• Distance Adjustment

Press “Smart Touch”, then press “Touchswitch” to be on. Click Setting. Setup the “Projector Distance” to 1-2M when the distance between projector and the projection image is 1-2M, and setup the “Projector Distance” >2M when the distance between projector and the projection image is >2M, it needs manual calibrate after setup the Projector Distance.

• Manual Calibrate

Press “Smart Touch”, and press “Touchswitch” to be on. Click Manual Calibrate, and click the middle point of “+” one by one with the IWB pen according to the tips, and the system will return to the setting page with tip after finished.

Troubleshooting

• Problems

No reaction after switch on. Be sure that the power cord is securely connected to the projector and the other end is plugged into an outlet with power.

• Image Problems

No image after switch on. Unplug the power cord and wait for a short while, then plug it and switch on again to check if has image.

• Image Unclear

Adjust the projection distance, and focus, and check the lens if clear or not.

• Remote Control Problems

Check if the battery inside is out of power or poor connected.

• No reaction with Manual Calibrate in “Smart Touch”

Check if the lens cover paddle is at the end of right side. If the battery power of the IWB pen is too low.

- If the problem persists, contact your local reseller or service center.

Cautions

- All the safety and operating instructions should be read before the product is operated. Follow all warnings and instructions marked on the projector.

- Do not attempt to service this projector yourself as opening or removing covers. Do not drop or bump the projector, otherwise damages or malfunctions may result.

- Use the projector in good conditions of ventilation, temperature, and humidity.

- The openings should never be covered with cloth or other materials, and the bottom opening should not be blocked by placing the projector on a bed, sofa, rug, or other similar surface.

- This projector should never be placed near or over a intense light, radiator, heat register or dust conditions.

- This projector produces intense light from the projection lens. Do not stare directly into the lens, otherwise, eye damage could result.

- Never push objects of any kind into this projector through cabinet slots as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock. Never spill liquid of any kind on the projector.